



.1 General

- .1 Connect emergency distribution to fire pump controller. Fire pump controller will be provided by the Mechanical Contractor..
- .2 Make all connections to the fire pump controller, as required by the Mechanical Contractor.
- .3 Provide fire pump alarm monitoring in accordance with NFPA20. This shall include the following:
 - .1 Pump or motor running.
 - .2 Loss of phase.
 - .3 Phase reversal.
 - .4 Controller connected to alternate source