

## Operator Instruction – Natural Ventilation – Override Type1

1. Natural Ventilation - General control strategies
  - .1 Natural ventilation will be used as the first stage of cooling in each zone. Automatic windows will be allowed to open when the outdoor air temperature is between 16°C (adj) and 25°C (adj) to automatically control room temperature in conjunction with the adjacent Fan Coil Units.
  - .2 Natural Ventilation will be disabled, and automatic windows will be closed during a Forest Fire period, high wind, or rainfall event.
2. Natural Ventilation – Push-button override
  - .1 A local push-button override allows the user to locally control the operation of the windows in their office.
    - .1 By pressing and holding the upper portion of the button the windows will open, when the button is released, the windows will stop opening. **There is a delay in opening.**
    - .2 By pressing and holding the lower portion of the button the windows will close, when the button is released, the windows will stop closing. **There is a delay in closing.**
  - .2 **Natural Ventilation will revert to automatic system control after 60min.**

