

Operator Instruction – Natural Ventilation – Override Type 2

1. Natural Ventilation - General control strategies
 - .1 Natural ventilation will be used as the first stage of cooling in each zone. Automatic windows will be allowed to open when the outdoor air temperature is between 16°C (adj) and 25°C (adj) to automatically control room temperature in conjunction with the adjacent Fan Coil Units.
 - .2 Natural Ventilation will be disabled, and automatic windows will be closed during a Forest Fire period, high wind, or rainfall event.
2. Natural Ventilation – Push-button override
 - .1 A local push-button override allows the user to locally control the operation of the windows in the space.
 - .1 With each press of the upper portion of the button, the windows will open 25%. 4-button presses up will open to 100%. **There is a minor time delay before the windows will move.**
 - .2 With each press of the bottom portion of the button, the windows will close 25%. 4-button presses down will close to 0%. **There is a minor time delay before the windows will move.**
 - .2 **Natural Ventilation will revert to automatic system control after 60min.**

